

TO EEC MODULE

PAGE 23-3

11 T/Y 11 T/Y  
S128 → TO TACH TEST PAGE 23-3

11 T/Y 11 T/Y  
C116 → TO EDIS MODULE PAGE 23-3

11 T/Y

C147

11 T/Y

INSTRUMENT CLUSTER

HOT IN RUN AND START

17 INTERIOR FUSE  
15A PANEL  
PAGE 13-6

C214

640 R/Y

→ TO LOW OIL LEVEL RELAY  
PAGE 65-2

S213

640 R/Y

640 R/Y

C222

640 R/Y


C221

640 R/Y

640 R/Y

640 R/Y

C221

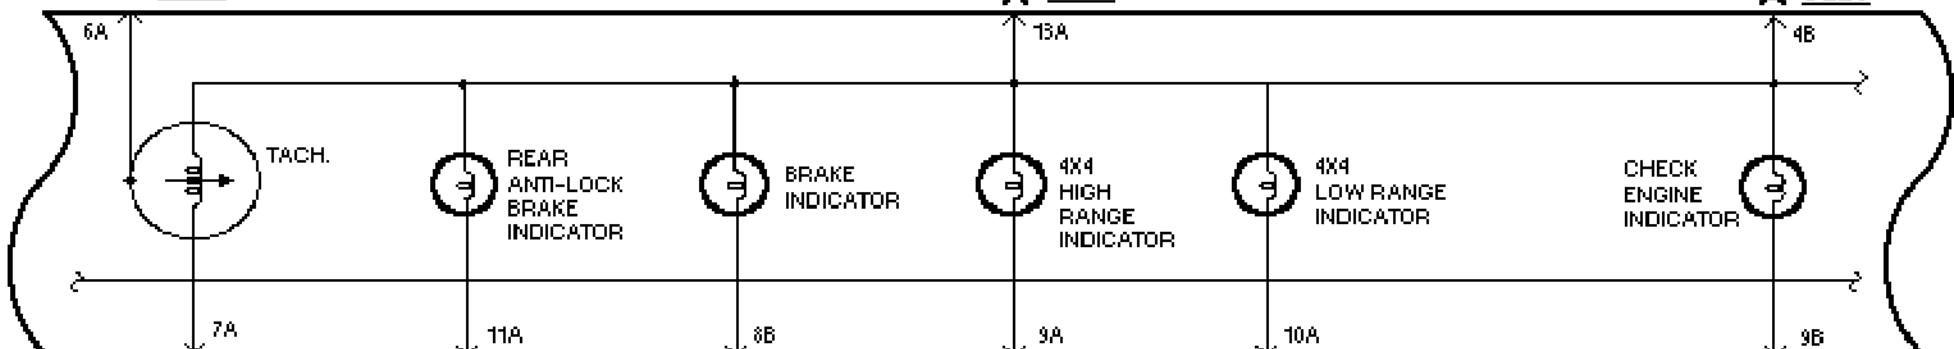

398 BK/Y

C222 DG

TO RABS MODULE  
PAGE 42-2

C221 PIW

TO DUAL BRAKE  
WARNING ASSY.  
PAGE 65-1

C222 LB

TO ELECTRONIC  
SHIFT CONTROL  
MODULE  
PAGE 34-2

C147 398 BK/Y

S104

57 BK

SEE GROUNDS  
PAGE 10-2

TO ELECTRONIC  
SHIFT CONTROL  
SWITCHES  
PAGE 34-2

TO ELECTRONIC  
SHIFT CONTROL  
MODULE  
PAGE 34-2

782 BR/W

C221

784 LB/BK

C147 LB/BK

784 C124

LB/BK

784

4X4 INDICATOR  
SWITCH  
PAGE 34-2

C221

C147

201 T/R

C116

201 T/R

C104

658 PK/LG

TO EEC  
MODULE  
PIN 17  
PAGE  
23-3